VX-18	
Part #	Part Description
69020	Ab Crunch Strap
55850	Ab Pulley assembly- with pulley and hardware
54790	Ab Pulley weldment- without pulley and hardware
57900	Access Door (painted)
2.5AO	Add-on plate- 2.5 pound
5.0AO	Add-on plate- 5 pound
60760	Adjustable Pulley Assembly with pulley and hardware (main column)
60580	Adjustable Pulley Bracket- no pulley or hardware (main column)
54760	Bar/Shaft- for press adjust- moves into notches (uses 54770 e-ring)
53770	Bar/Shaft- pivot for lat hold down
54150	Bar/Shaft- two are used inside row/ab seat back adjustment
11920	Bearing- freeway for most pivot points, used with #13790 button head bolts
38770	Bench Leg Stop Bar- used in leg/ab station
13790	Bolt- 1/2-13 X 1 button head for most freeway bearing pivot points
20850	Bolt- 1/4 X 20 X .75 for mounting upholstery
63330	Bolt- 1/4-20 joint connector to mount low pulley (uses #63340 nut)
55870	Bolt- 3/8-16 x ½ blk hex with flange for upper stack support (2 required)
55860	Bolt- 3/8-16 X 3/4 blk hex with flange for frame (21 required)
23300	Bolt- 3/8-16 X 1.25 to attach some pulleys (metal on 1 side)
52910	Bolt- 3/8-16 X 1.5 for columns, pulley assemblies (double, single, adj., etc.)
12760	Bolt- 3/8-16 X 1.75 for most pulley assemblies & column caps
29190	Bolt- 3/8-16 X 3 for top plate
14210	Bolt- 3/8-16 X 4 for most adjustable pulleys
27330	Bolt- 5/16 X .625, 1/4-20 shoulder for row cable retainer
40910	Bolt- 5/16-18 X 1.25 for VX18 top plate wheel assy.
43230	Bolt- 5/16-18 X 3 SHC for seat lock
63520	Box #1- VX18 Large
63530	Box #2- VX18 Leg/Ab
63570	Box- VX18 Inner
52730	Bracket- attached to cable end-hooks onto press adjust lever
20000	Bracket- for double-moving pulley (2 required)
55070	Bracket- part of press adjustment assembly that goes into notches
59120	Bumper- double stem for calf/row block
42220	Bumper Tube- for butterfly arm pawl
47590	Bumper- used at row arm rest/down stop
57670	Bumper weight stack (two required per stack)
39900	Bumper, Top Plate
54750	Bumper/Down Stop- press arm rest on press column
54130	Bumper/Plug- 3/4 inch stem for butterfly cam, calf/row block & leg/ab seat
11450	Bushing- bronze for butterfly cams
	Bushing Cap- left-side, secures press arm into press housing OBSOLETE
	Bushing Cap- right-side, secures press arm into press housing OBSOLETE
	Bushing Cap (right or left) secures press arm [uses 14500 (4) & 15890 (2)]
43780	Bushing- nylon for butterfly arm
24160	Bushing- nylon for pivot pulley and original bench
51600	Bushing- press arm (plastic ring version), press arm pivots on these
20620	Bushing- weight plate (all) & top plate
43050	Butterfly Arm assembly- left-side
43040	Butterfly Arm assembly- right-side
43070	Butterfly Cam assembly- left-side
43060	Butterfly Cam assembly- right-side
47930	Cable- 10-inch extension for low pulley
41010	Cable- ab crunch- 79.0" long
FS	Cable attachment for top plate wheel assy
28840	Cable- butterfly station- 70.84" long
55090	Cable- for press adjustment inside press arm assembly

VX-18	
Part #	Part Description
18560	Cable- high pulley- 153.2" long
57800	Cable- low pulley w/o 10-inch extension 269.20" long (11.25" stripped)
59840	Cable- low pulley/leg extension set with 10-inch extension
40970	Cable- press station- 137.0" long
40980	Cable- row station- 28.18" long
55900	Cable Set/Kit- VX18 complete
22120	Cable Stop- slotted for leg extension cable (set screw #22280 sold separately)
17160	Cable Tie
61500	Calf/Row Block
43480	Clevis Pin/Bar/Shaft- 2-5/8 X 1/2- leg/ab seat back pivots on this (uses 53790 c-ring)
55910	Clip- plated for row seat back adjustment
15920	Clip/Bracket- used to anchor cable in row column
CGPB	Close Grip Press Attachment Set- Black- allows close grip exercises on press arms
CGPCP	Close Grip Press Attachment Set- Classic Pewter- for close grip exercises on press arms
CGPSS	Close Grip Press Attachment Set- Sterling Silver- for close grip exercises on press arms
CGPW	Close Grip Press Attachment Set- White- allows close grip exercises on press arms
65570	Close Grip Press Attachment- right-side
65580	Close Grip Press Attachment- left-side
54730	Column Cap- main column VX18/1850
54720X	Column Cap- press column SERVICE version for cable rub
54720	Column Cap- press column VX18/1850
39200	Column Cap- row/ab station VX18/1850/1800
12340	Cotter Pin- 3/16 X 1.5 inch for butterfly arms/cams (used w/#62850 washer)
55080	Cover- plastic, for press housing
CCF???	Cross Chest Fly Option Kit- converts standard butterfly to cross chest version
63540	Curl Bar assembly- (straight) BLACK only
14180	Double Moving Pulley assembly- with pulleys & hardware
54770	E-Ring- 1/4 external used with 54760 shaft
53790	E-Ring/Crescent-Ring- used with press & row adjustment lever assemblies
55050	Floor Piece/Board- large triangular
10340	Foam Roller
54530	Frame Member- main column to row station
54540	Frame Member- row station to press station
13240	Grip- 4 Inch for inner section of lat bar
61910	Grip- 6-inch "SS Cap" for camberd bar & VX row arm (2 per side, total of 4)
61890	Grip- 8-inch "SS Cap" version for VX/1650 accessories
54740	Guide- nylon, for cable press arm cables
55890	Guide Rod Assy 74.74" with tube connector & spacer (bolt not needed)
62000	Handle- Single Grip 8-inch strap
55700	Hardware Kit- 1850
61880	Knob- bench adjust and Lat hold down grip (yellow)
28020	Label- "Manufactured by"
28010	Label- "Warning" for wt. Guard
61720	Label 10-inch Silver Vectra (stack column)- pairs with VX diamond label
43820	Label right side squat
43830 63260	Label- right-side squat
60600	Label- VX Diamond- pairs with 10-inch silver Vectra label Label- weight stack number sheet
62640	Lat Bar assembly
62680	Lat Hold Down assembly
52980	Lat Hold Down Latch weldment
61730	Lat Hold Down Pad/Roller (2 required)
62160	Lat Hold Down weldment
53930	Latch/Lever- squat attachments (uses 54010 spring pin)
54080	Leg Develop weldment- without pads
54090	Leg Developer- current version with contoured leg pads
O-030	Led Developer current version with contoured leg page

Part # Part Description 62690 Leg/Ab Seat Bottom assembly- with seat lock strut, but not upholstery 62710 Leg/Ab Station 54050 Leg/Ab Station 54050 Leg/Ahle Strap 52230 Lever- press & row seat adjust (requires #53790 crescent ring) 29040 Low Pulley Bracket- 6 Inch without pulley 63560 Main Column assembly 55710 Main Frame assembly (part with squat platform) 55510 Manual- VX18 and 1850 13740 Nut- 1/4-20 for row arm cable retainer pivot 63340 Nut- 1/4-20 joint connector- used to mount low pulley (used w/#63330 bolt) 55920 Nut- 10-32 used as jam nut on press cable adjustment screw 10600 Nut- Locking 38-16 Hex for most pulley assemblies 53920 Pad- contoured for leg developer (uses 2 #14500 screws) 65870 Pad- Squat Shoulder 57570 Padding- center of curl and lat bar, etc. 46000 Panel Fastener Clip/plug- used to secure column caps 28151 Pawl- for butterfly arms 54810 Pin- row seat pivot in seat back adjustment 42560 Pin/Bar- row/leg/ab seat pivot 42560 Pin/Bar- row/leg/ab seat pivot 425830 Pin/Dowel- 25 DIA X 1 for butterfly arm pawl 27990 Plug (Christmas tree)- black plastic for cable retainer openings 66380 Press Arm/Handle assembly for 1850/3850/xx-18/xx-38 60380 Press Housing assy 7990 Plug (Christmas tree)- black plastic for cable retainer openings 66380 Press Lever assy-UOVER 60400 Press Lever assy-UOVER 60400 Retainer- for cable on leg developer and top of weight stack 66380 Retainer- for cable on leg developer 67910 Rack Housing used in row seat back adjustment- has notches-painted 67910 Rack Housing used in row seat back adjustment- has notches-painted 67910 Rack Housing used in row seat back adjustment- has notches-painted 67910 Rack Housing used in row seat back adjustment- has notches-painted 67910 Rack Housing used in row seat back adjustment has notches-painted 67910 Rack Housing used in row seat back adjustment has notches-painted 67910 Rack Housing used in row seat back adjustment has notches-painted 67910 Rack Housing used in row seat back adjustment has notches-painted 67910 Rack Housing used in row	VX-18	
62710 Leg/Ab Seat Bottom assembly- with seat lock strut, but not upholstery 62710 Leg/Ab Seat Handle assembly 55840 Leg/Ah Seat Handle assembly 55840 Leg/Ah Seat Handle assembly 5230 Lever- press & row seat adjust (requires #53790 crescent ring) 52230 Lever- press & row seat adjust (requires #53790 crescent ring) 5230 Lever- press & row seat adjust (requires #53790 crescent ring) 5270 Main Frame assembly 52710 Main Frame assembly (part with squat platform) 52810 Manual- VX18 and 1850 13740 Nut- 1/4-20 for row arm cable retainer pivot 63340 Nut- 1/4-20 joint connector- used to mount low pulley (used w/#63330 bolt) 53920 Nut- 10-32 used as jam nut on press cable adjustment screw 10800 Nut- Locking 3/8-16 Hex for most pulley assemblies 53920 Pad- contoured for leg developer (uses 2 #14500 screws) 65870 Pad- Squat Shoulder 65870 Pad- Squat Shoulder 67570 Padding- center of curl and lat bar, etc. 64000 Panel Fastener Clip/plug- used to secure column caps 67570 Padding- center of curl and lat bar, etc. 67600 Pin- row seat lock in seat back adjustment 67600 Pin- row seat lock in seat back adjustment 67600 Pin- row seat pivot in seat back adjustment 67600 Pin- presseat jam seat pivot 67600 Pin- press Lever assy-LOWER 67600 Pack For Column vX18		Part Description
Eg/Ab Seat Handle assembly		
55840 Leg/Ab Station 54050 Leg/Ahkle Strap 52230 Lever- press & row seat adjust (requires #53790 crescent ring) 29040 Low Pulley Bracket- 6 Inch without pulley 63560 Main Column assembly 55710 Main Frame assembly (part with squat platform) 55710 Manual- VX18 and 1850 13740 Nut- 1/4-20 for row arm cable retainer pivot 63340 Nut- 1/4-20 joint connector- used to mount low pulley (used w/#63330 bolt) 63320 Nut- 1/0-32 used as jam nut on press cable adjustment screw 10600 Nut- Locking 3/8-16 Hex for most pulley assemblies 53920 Pad- contoured for leg developer (uses 2 #14500 screws) 65870 Pad- Squat Shoulder 57570 Padding- center of curl and lat bar, etc. 46000 Panel Fastener Clip/plug- used to secure column caps 28151 Pawl- for butterfly arms 54800 Pin- row seat lock in seat back adjustment 54800 Pin- row seat pivot in seat back adjustment 74260 Pin/Dar- row/leg/ab seat pivot 74990 Pin/Davel- 25 DIA X1 for butterfly arm pawl 74990 Pin/Dowel- 25 DIA X1 for butterfly arm pawl 74990 Pin/Dowel- 25 DIA X1 for butterfly arm pawl 74990 Poster- VX18/1850 74983 Press Housing assy 75810 Press Housing assy 75810 Press Housing assy 75810 Press Lever assy-LOWER 75410 Press Lever assy-LOWER 75410 Press Lever assy-LOWER 75410 Press Lever assy-LOWER 75410 Retainer- for roable on leg developer and top of weight stack 75410 Retainer- for cable on leg developer 75410 Roll Pin- 5/32D X 7/8L for swivel pulleys, butterfly arm pawls, etc. 75410 Row Arm - weldment 75450 Row Arm - weldment 75450 Row Arm - weldment 75450 Screw- 1/4-20 X 1.50 OPH for arm pads & bushing cap tensioning 75470 Screw- 1/4-20 X 1.50 OPH for arm pads & bushing cap tensioning 75470 Screw- 1/4-20 X 1.50 OPH for arm pads & bushing cap tensioning 75470 Screw- 1/4-20 X 1.50 OPH for arm pads & bushing cap tensioning 75470 Screw- 1/4-20 X 1.50 OPH for arm pads & bushing cap tensioning 75470 Screw- 1/4-20 X 1.50 OPH for arm pads & bushing cap tensioning 75470 Screw- 1/4-20 X 1.50 OPH for arm pads & bushing cap tensioning 75470 Screw- 1/4-20 X 1.50 OPH for arm pads & bushin		
54050 Leg/Ankle Strap 52230 Lever- press & row seat adjust (requires #53790 crescent ring) 5230 Lever- press & row seat adjust (requires #53790 crescent ring) 55710 Main Frame assembly 55710 Main Frame assembly (part with squat platform) 55510 Manual- VX18 and 1850 13740 Nut- 1/4-20 for row arm cable retainer pivot 63340 Nut- 1/4-20 joint connector- used to mount low pulley (used w/#63330 bolt) 63340 Nut- 10-32 used as jam nut on press cable adjustment screw 10600 Nut- Locking 3/8-16 Hex for most pulley assemblies 53920 Pad- contoured for leg developer (uses 2 #14500 screws) 65870 Pad- Squat Shoulder 57570 Padding- center of curl and lat bar, etc. 46000 Panel Fastener Clip/plug- used to secure column caps 28151 Pawl- for butterfly arms 54810 Pin- row seat pivot in seat back adjustment 54810 Pin- row seat pivot in seat back adjustment 54810 Pin- row seat pivot in seat back adjustment 54810 Pin- row seat pivot in seat back adjustment 54810 Pin- row seat pivot in seat back adjustment 54810 Pin- fow seat pivot in seat back adjustment 54810 Pin- fow seat pivot in seat back adjustment 54810 Pin- row seat pivot in seat back adjustment 54810 Pin- Fow seat pivot in seat back adjustment 54810 Pin- Fow seat pivot in seat back adjustment 54810 Pin- Fow seat pivot in seat back adjustment 54810 Pin- Fow seat pivot in seat back adjustment 54810 Pin- Fow seat pivot in seat back adjustment 54810 Pin- Bers Arm/Handle assembly for 1850/3850/vx-18/vx-38 55810 Press Arm/Handle assembly for 1850/3850/vx-18/vx-38 63580 Press Housing assy 55810 Press Lever assy-LOWER 64040 Press Lever assy-UPPER 63550 Press/Stack Column- VX18 646040 Press Lever assy-UPPER 63550 Press/Stack Column- VX18 646040 Retainer- for cable on leg developer and top of weight stack 646040 Retainer- for row arm cable 646040		
E2230 Lever- press & row seat adjust (requires #53790 crescent ring)		
29040 Low Pulley Bracket- 6 Inch without pulley 63560 Main Column assembly 55710 Main Frame assembly (part with squat platform) 55510 Manual- VX18 and 1850 13740 Nut- 1/4-20 for row arm cable retainer pivot 63340 Nut- 1/4-20 joint connector- used to mount low pulley (used w/#63330 bolt) 58920 Nut- 10-32 used as jam nut on press cable adjustment screw 10600 Nut- Locking 3/8-16 Hex for most pulley assemblies 53920 Pad- contoured for leg developer (uses 2 #14500 screws) 65870 Pad- Squat Shoulder 57570 Padding- center of curl and lat bar, etc. 46000 Panel Fastener Clip/plug- used to secure column caps 28151 Pawl- for butterfly arms 54800 Pin- row seat lock in seat back adjustment 54810 Pin- row seat pivot in seat back adjustment 54810 Pin- row seat pivot in seat back adjustment 64810 Pin- row seat pivot in seat back adjustment 97990 Pilug (Christmas tree)- black plastic for cable retainer openings 97990 Pilug (Christmas tree)- black plastic for cable retainer openings 97990 Press Arm/Handle assembly for 1850/3850/vx-18/vx-38 97 Press Arm/Handle assembly for 1850/3850/vx-18/vx-38 97 Press Lever assy-UPPER 9790 Pilley - 4.5-inch 9790 Pilley - 4.5-inch 9790 Pilley - 4.5-inch 9790 Pilley - 5.76D X 1.25 for leg developer 97910 Roll Pin- 5/32D X 7/8L for swivel pulleys, butterfly arm pawls, etc. 97910 Roll Pin- 5/32D X 7/8L for swivel pulley, butterfly arm pawls, etc. 97910 Roll Pin- 5/32D X 7/8L for swivel pulley, butterfly arm pawls, etc. 97910 Roll Pin- 5/32D X 7/8L for swivel pulley, butterfly arm pawls, etc. 97910 Roll Pin- 5/32D X 7/8L for swivel pulley bushing cap tensioning 97910 Roll Pin- 5/32D X 7/8L for swivel pulley bushing cap tensioning 97910 Screw- 1/-20 X 1.25 stored for log developer pads & press bushing caps 97910 Screw- 1/-20 X 1.51 stored press adjust cable tension (uses #58920 jam nut) 97910 Scat Back Adjustment assembly- row/ab station 97910 Scat Back Adjustment assembly- row/ab station		•
63560 Main Frame assembly (part with squat platform) 55710 Main Frame assembly (part with squat platform) 55510 Manual- VX18 and 1850 13740 Nut- 1/4-20 for row arm cable retainer pivot 63340 Nut- 1/4-20 joint connector- used to mount low pulley (used w/#63330 bolt) 58920 Nut- 10-32 used as jam nut on press cable adjustment screw 10600 Nut- Locking 3/8-16 Hex for most pulley assemblies 53920 Pad- contoured for leg developer (uses 2 #14500 screws) 65870 Pad- Squat Shoulder 57570 Padding- center of curl and lat bar, etc. 46000 Panel Fastener Clip/plug- used to secure column caps 28151 Pawl- for butterfly arms 54800 Pin- row seat lock in seat back adjustment 54810 Pin- row seat lock in seat back adjustment 42560 Pin/Bar- row/leg/ab seat pivot 28930 Pin/Dowel25 DIA X 1 for butterfly arm pawl 27990 Pin/Dowel25 DIA X 1 for butterfly arm pawl 27990 Pin/Bar- row/leg/ab seat pivot 63800 Press Arm/Handle assembly for 1850/3850/vx-18/vx-38 63800 Press Lever assy-LUPER <tr< td=""><td></td><td></td></tr<>		
Inches I		
55510 Manual- VX18 and 1850	55710	Main Frame assembly (part with squat platform)
Sa340 Nut- 1/4-20 joint connector- used to mount low pulley (used w/#63330 bolt)	55510	
Nut- 10-32 used as jam nut on press cable adjustment screw		Nut- 1/4-20 for row arm cable retainer pivot
Nut- Locking 3/8-16 Hex for most pulley assemblies		
Pad- contoured for leg developer (uses 2 #14500 screws) 65870 Pad- Squat Shoulder 57570 Padding- center of curl and lat bar, etc. 46000 Panel Fastener Clip/plug- used to secure column caps 28151 Pawl- for butterfly arms 54800 Pin- row seat lock in seat back adjustment 54810 Pin- row seat lock in seat back adjustment 42560 Pin/Bar- row/leg/ab seat pivot 28930 Pin/Dowel25 DIA X 1 for butterfly arm pawl 27990 Plug (Christmas tree)- black plastic for cable retainer openings 6880 Poster- VX18/1850 63580 Press Arm/Handle assembly for 1850/3850/vx-18/vx-38 60380 Press Housing assy 55810 Press Lever assy-LOWER 60400 Press Lever assy-UPPER 63550 Press/Stack Column- VX18 10580 Pulley- 4.5-inch 25220 Pulley- 6 inch 54190 Rack Housing used in row seat back adjustment- has notches-painted 2660 Retainer- for cable on leg developer and top of weight stack 46920 Retainer- for row arm cable 48340 Roll Pin- 5/16D X 1.25 for leg developer 27910 Roll Pin- 5/32D X 7/8L for swivel pulleys, butterfly arm pawls, etc. 63450 Row Arm assy- chest supported VX 63450 Row Arm assy- chest supported VX 63460 Row Arm weldment 42450 Row Seat Lever 51680 Safety Tread- for calf/row block 14500 Screw- 1/4-20 X .25 set screw for slotted cable stop 55740 Screw- 1/4-20 X 1.25 phillip for leg developer pass adjust cable tension (uses #58920 jam nut) 56050 Seat Back Meldment- row station, painted		
Factor Pad- Squat Shoulder Fastener Clip/plug- used to secure column caps Pawl- for butterfly arms Fawl- for butterfly arms Fawl- for butterfly arms Pawl- for weat lock in seat back adjustment Pin- row seat lock in seat back adjustment Pin- row seat pivot in seat back adjustment Pin- row seat pivot Pin/Bar- row/leg/ab seat pivot Pin/Dowel25 DIA X 1 for butterfly arm pawl Pin/Bar- row/leg/ab Pin		
Padding- center of curl and lat bar, etc. 46000 Panel Fastener Clip/plug- used to secure column caps 28151 Pawl- for butterfly arms 54800 Pin- row seat lock in seat back adjustment 54810 Pin- row seat pivot in seat back adjustment 42560 Pin/Bar- row/leg/ab seat pivot 28930 Pin/Dowel25 DIA X 1 for butterfly arm pawl 27990 Plug (Christmas tree)- black plastic for cable retainer openings 56880 Poster- VX18/1850 63580 Press Arm/Handle assembly for 1850/3850/vx-18/vx-38 60380 Press Housing assy 55810 Press Lever assy-LOWER 60400 Press Lever assy-UPPER 63550 Press/Stack Column- VX18 10580 Pulley- 4.5-inch 25220 Pulley- 6 inch 54190 Rack Housing used in row seat back adjustment- has notches-painted 20660 Retainer- for cable on leg developer and top of weight stack 46920 Retainer- for row arm cable 48340 Roll Pin- 5/16D X 1.25 for leg developer 27910 Roll Pin- 5/32D X 7/8L for swivel pulleys, butterfly arm pawls, etc. 63450 Row Arm assy- chest supported VX 63440 Row Arm assy- chest supported VX 63440 Row Arm- weldment 42450 Row Seat Lever 51680 Safety Tread- for calf/row block 14500 Screw- ¼-20 X .55 phillip for leg developer pads & press bushing caps 55740 Screw- ¼-20 X 1.55 or PH for arm pads & bushing cap tensioning 22280 Screw- 1/4-20 X .25 set screw for slotted cable stop 55740 Screw- 1/4-20 X 1.55 phillip for press adjust cable tension (uses #58920 jam nut) 56050 Seat Back Adjustment assembly- row/ab station 54270 Seat Back weldment- row station, painted		
Panel Fastener Clip/plug- used to secure column caps 28151 Pawl- for butterfly arms 54800 Pin- row seat lock in seat back adjustment 54810 Pin- row seat pivot in seat back adjustment 42560 Pin/Bar- row/leg/ab seat pivot 28930 Pin/Dowel25 DIA X 1 for butterfly arm pawl 27990 Plug (Christmas tree)- black plastic for cable retainer openings 56880 Poster- VX18/1850 63580 Press Arm/Handle assembly for 1850/3850/vx-18/vx-38 60380 Press Housing assy 55810 Press Lever assy-LOWER 60400 Press Lever assy-UPPER 63550 Press/Stack Column- VX18 10580 Pulley- 4.5-inch 25220 Pulley- 6 inch 54190 Rack Housing used in row seat back adjustment- has notches-painted 20660 Retainer- for cable on leg developer and top of weight stack 46920 Retainer- for row arm cable 48340 Roll Pin- 5/16D X 1.25 for leg developer 27910 Roll Pin- 5/32D X 7/8L for swivel pulleys, butterfly arm pawls, etc. 63450 Row Arm assy- chest supported VX 63440 Row Arm- weldment 42450 Row Seat Lever 51680 Safety Tread- for calf/row block 14500 Screw- ¼-20 X 1.25 OPH for arm pads & bushing cap tensioning 22280 Screw- 1/4-20 X 1.25 oPH for arm pads & bushing cap tensioning 22280 Screw- 1/4-20 X 1.25 phillip for leg developer packs press bumper) 53710 Screw- 1/4-20 X 1.25 phillip for press adjust cable tension (uses #58920 jam nut) 56050 Seat Back Weldment - row station, painted		
28151 Pawl- for butterfly arms 54800 Pin- row seat lock in seat back adjustment 54810 Pin- row seat pivot in seat back adjustment 42560 Pin/Bar- row/leg/ab seat pivot 28930 Pin/Dowel25 DIA X 1 for butterfly arm pawl 27990 Plug (Christmas tree)- black plastic for cable retainer openings 56880 Poster- VX18/1850 63580 Press Arm/Handle assembly for 1850/3850/vx-18/vx-38 60380 Press Housing assy 55810 Press Lever assy-LOWER 60400 Press Lever assy-LOWER 60400 Press Lever assy-UPPER 63550 Press/Stack Column- VX18 10580 Pulley- 4.5-inch 25220 Pulley- 6 inch 54190 Rack Housing used in row seat back adjustment- has notches-painted 20660 Retainer- for cable on leg developer and top of weight stack 46920 Retainer- for row arm cable 48340 Roll Pin- 5/16D X 1.25 for leg developer 27910 Roll Pin- 5/32D X 7/8L for swivel pulleys, butterfly arm pawls, etc. 63450 Row Arm assy- chest supported VX 63440 Row Arm- weldment 42450 Row Seat Lever 51680 Safety Tread- for calf/row block 14500 Screw- ¼-20 X 1.25 OPH for arm pads & bushing cap tensioning 22280 Screw- 1/4-20 X .25 set screw for slotted cable stop 55740 Screw- 1/4-20 X 1.25 phillip for press adjust cable tension (uses #58920 jam nut) 56050 Seat Back Adjustment assembly- row/ab station 54270 Seat Back weldment- row station, painted		
Pin- row seat lock in seat back adjustment Pin- row seat pivot in seat pivot in seat pivot Pin- row seat pivot in seat pivot in seat pivot Pin- row seat pivot in seat pivot in seat pivot Pin- row seat pivot in seat pivot in seat pack Pin- row seat pivot in seat pack Pin- row seat pivot in seat pack Pin- row seat pivot in seat pack Poster vX18/1850 Poster vX18/1850 Press Arm/Handle assembly for 1850/3850/vx-18/vx-38 Press Housing assy Press Housing assy Press Lever assy-LOWER Poster assy-LOWER Poster assy-UPPER Press Lever assy-UPPER P		
Pin- row seat pivot in seat back adjustment		
Pin/Bar- row/leg/ab seat pivot Pin/Dowel25 DIA X 1 for butterfly arm pawl Plug (Christmas tree)- black plastic for cable retainer openings Poster- VX18/1850 Poster- VX18/1850 Press Arm/Handle assembly for 1850/3850/vx-18/vx-38 Press Housing assy Press Housing assy Press Lever assy-LOWER Press Lever assy-UPPER Press/Stack Column- VX18 Pulley- 4.5-inch Pulley- 4.5-inch Patiev- for cable on leg developer and top of weight stack Resauch Retainer- for row arm cable Retainer- for row arm cable Retainer- for row arm cable Roll Pin- 5/32D X 7/8L for swivel pulleys, butterfly arm pawls, etc. Row Arm say- chest supported VX Row Arm- weldment Row Arm- weldment Row Arm- weldment Safety Tread- for calf/row block Safety Tread- for calf/row block Screw- 1/4-20 X .25 set screw for slotted cable stop Screw- 1/4-20 X .25 phillip for legs adjust cable tension (uses #58920 jam nut) Scoto Seat Back weldment- row station, painted		
Pin/Dowel25 DIA X 1 for butterfly arm pawl Plug (Christmas tree)- black plastic for cable retainer openings Poster- VX18/1850 Poster- VX18/1850 Press Arm/Handle assembly for 1850/3850/vx-18/vx-38 Press Housing assy Press Lever assy-LOWER Press Lever assy-UPPER Press/Stack Column- VX18 Pulley- 4.5-inch Pulley- 4.5-inch Pulley- 6 inch Rack Housing used in row seat back adjustment- has notches-painted Retainer- for cable on leg developer and top of weight stack Retainer- for row arm cable Rady Roll Pin- 5/16D X 1.25 for leg developer Roll Pin- 5/32D X 7/8L for swivel pulleys, butterfly arm pawls, etc. Row Arm assy- chest supported VX Row Arm weldment Row Arm- weldment Row Seat Lever Safety Tread- for calf/row block Screw- 1/4-20 X .50 phillip for leg developer pads & press bushing caps Screw- 1/4-20 X .1.25 oPH for arm pads & bushing cap tensioning Screw- 1/4-20 X .1.25 phillips or leg developer leg leveloper (attaches press bumper) Screw- 1/4-20 X .1.25 phillips for press adjust cable tension (uses #58920 jam nut) Seat Back Adjustment assembly- row/ab station Seat Back weldment- row station, painted		· · · · · · · · · · · · · · · · · · ·
Plug (Christmas tree)- black plastic for cable retainer openings Poster- VX18/1850 Press Arm/Handle assembly for 1850/3850/vx-18/vx-38 Press Housing assy Press Lever assy-LOWER 60400 Press Lever assy-UPPER 63550 Press/Stack Column- VX18 10580 Pulley- 4.5-inch 25220 Pulley- 6 inch 54190 Rack Housing used in row seat back adjustment- has notches-painted 20660 Retainer- for cable on leg developer and top of weight stack 46920 Retainer- for row arm cable 48340 Roll Pin- 5/16D X 1.25 for leg developer 27910 Roll Pin- 5/32D X 7/8L for swivel pulleys, butterfly arm pawls, etc. 63450 Row Arm assy- chest supported VX 63440 Row Arm- weldment 42450 Row Seat Lever 51680 Safety Tread- for calf/row block 14500 Screw- 1/4-20 X .50 phillip for leg developer pads & press bushing caps 15890 Screw- 1/4-20 X 1.25 oPH for arm pads & bushing cap tensioning 22280 Screw- 1/4-20 X 1.50 phillip for leg developer soluted cable stop Screw- 1/4-20 X 1.55 ers crew for slotted cable stop Screw- 1/4-20 X 1.55 phillip for press adjust cable tension (uses #58920 jam nut) 5050 Seat Back Adjustment assembly- row/ab station 54270 Seat Back weldment- row station, painted		
Foster- VX18/1850 Press Arm/Handle assembly for 1850/3850/vx-18/vx-38 Press Arm/Handle assembly for 1850/3850/vx-18/vx-38 Press Housing assy Press Lever assy-LOWER Press Lever assy-UPPER Press/Stack Column- VX18 Pulley- 4.5-inch Pulley- 4.5-inch Pack Housing used in row seat back adjustment- has notches-painted Retainer- for cable on leg developer and top of weight stack Regularier- for row arm cable Retainer- for row arm cable Roll Pin- 5/16D X 1.25 for leg developer Roll Pin- 5/32D X 7/8L for swivel pulleys, butterfly arm pawls, etc. Row Arm assy- chest supported VX Row Arm- weldment Row Safety Tread- for calf/row block Screw- 1/4-20 X .50 phillip for leg developer pads & press bushing caps Screw- 1/4-20 X .25 set screw for slotted cable stop Screw- 1/4-20 X .25 set screw for slotted cable stop Screw- 1/4-20 X 1.25 phillip for press adjust cable tension (uses #58920 jam nut) Scat Back Adjustment assembly- row/ab station Seat Back weldment- row station, painted		
Fress Arm/Handle assembly for 1850/3850/vx-18/vx-38 Fress Housing assy Fress Housing assy Fress Lever assy-LOWER Fress Lever assy-UPPER Fress Lever assy-UPPER Fress Lever assy-UPPER Fress/Stack Column-VX18 Fress/Stack Column-Fress/Stack Column-Fress/Stack Column-Fress/Stack Column-Fress/Stack Column-Fress/Stack Column-Fress/Stack Column-Fress/Stack Column-Fress/Stack Column-Fress/Stack C		
60380 Press Housing assy 55810 Press Lever assy-LOWER 60400 Press Lever assy-UPPER 63550 Press/Stack Column- VX18 10580 Pulley- 4.5-inch 25220 Pulley- 6 inch 54190 Rack Housing used in row seat back adjustment- has notches-painted 20660 Retainer- for cable on leg developer and top of weight stack 46920 Retainer- for row arm cable 48340 Roll Pin- 5/16D X 1.25 for leg developer 27910 Roll Pin- 5/32D X 7/8L for swivel pulleys, butterfly arm pawls, etc. 63450 Row Arm assy- chest supported VX 63440 Row Arm- weldment 42450 Row Seat Lever 51680 Safety Tread- for calf/row block 14500 Screw- ¼-20 X .50 phillip for leg developer pads & press bushing caps 15890 Screw- ¼-20 X 1.25 OPH for arm pads & bushing cap tensioning 22280 Screw- 1/4-20 X .25 set screw for slotted cable stop 55740 Screw- 1/4-20 X 1 black phillips VX18 press column (attaches press bumper) 53710 Screw- 10-32 X 1.25 phillip for press adjust cable tension (uses #58920 jam nut) 56050 Seat Back Adjustment assembly- row/ab station 54270 Seat Back weldment- row station, painted		
Press Lever assy-LOWER 60400 Press Lever assy-UPPER 63550 Press/Stack Column- VX18 10580 Pulley- 4.5-inch 25220 Pulley- 6 inch 54190 Rack Housing used in row seat back adjustment- has notches-painted 20660 Retainer- for cable on leg developer and top of weight stack 46920 Retainer- for row arm cable 48340 Roll Pin- 5/16D X 1.25 for leg developer 27910 Roll Pin- 5/32D X 7/8L for swivel pulleys, butterfly arm pawls, etc. 63450 Row Arm assy- chest supported VX 63440 Row Arm- weldment 42450 Row Seat Lever 51680 Safety Tread- for calf/row block 14500 Screw- 1/4-20 X .50 phillip for leg developer pads & press bushing caps 15890 Screw- 1/4-20 X .25 set screw for slotted cable stop 55740 Screw- 1/4-20 X 1 black phillips VX18 press column (attaches press bumper) 53710 Screw- 10-32 X 1.25 phillip for press adjust cable tension (uses #58920 jam nut) 56050 Seat Back Adjustment assembly- row/ab station 54270 Seat Back weldment- row station, painted		
60400 Press Lever assy-UPPER 63550 Press/Stack Column- VX18 10580 Pulley- 4.5-inch 25220 Pulley- 6 inch 54190 Rack Housing used in row seat back adjustment- has notches-painted 20660 Retainer- for cable on leg developer and top of weight stack 46920 Retainer- for row arm cable 48340 Roll Pin- 5/16D X 1.25 for leg developer 27910 Roll Pin- 5/32D X 7/8L for swivel pulleys, butterfly arm pawls, etc. 63450 Row Arm assy- chest supported VX 63440 Row Arm- weldment 42450 Row Seat Lever 51680 Safety Tread- for calf/row block 14500 Screw- 1/4-20 X .50 phillip for leg developer pads & press bushing caps 15890 Screw- 1/4-20 X .25 set screw for slotted cable stop 55740 Screw- 1/4-20 X 1 black phillips VX18 press column (attaches press bumper) 53710 Screw- 10-32 X 1.25 phillip for press adjust cable tension (uses #58920 jam nut) 56050 Seat Back Adjustment assembly- row/ab station		•
Press/Stack Column- VX18 10580 Pulley- 4.5-inch 25220 Pulley- 6 inch 54190 Rack Housing used in row seat back adjustment- has notches-painted 20660 Retainer- for cable on leg developer and top of weight stack 46920 Retainer- for row arm cable 48340 Roll Pin- 5/16D X 1.25 for leg developer 27910 Roll Pin- 5/32D X 7/8L for swivel pulleys, butterfly arm pawls, etc. 63450 Row Arm assy- chest supported VX 63440 Row Arm- weldment 42450 Row Seat Lever 51680 Safety Tread- for calf/row block 14500 Screw- 1/4-20 X .50 phillip for leg developer pads & press bushing caps 15890 Screw- 1/4-20 X .25 set screw for slotted cable stop 55740 Screw- 1/4-20 X 1 black phillips VX18 press column (attaches press bumper) 53710 Screw- 10-32 X 1.25 phillip for press adjust cable tension (uses #58920 jam nut) 56050 Seat Back Adjustment assembly- row/ab station 54270 Seat Back weldment- row station, painted		
Pulley- 6 inch Rack Housing used in row seat back adjustment- has notches-painted Retainer- for cable on leg developer and top of weight stack Retainer- for row arm cable Retainer- for row arm cable Roll Pin- 5/16D X 1.25 for leg developer Roll Pin- 5/32D X 7/8L for swivel pulleys, butterfly arm pawls, etc. Row Arm assy- chest supported VX Row Arm- weldment Row Arm- weldment Row Safety Tread- for calf/row block Safety Tread- for calf/row block Screw- 1/4-20 X .50 phillip for leg developer pads & press bushing caps Screw- 1/4-20 X 1.25 OPH for arm pads & bushing cap tensioning Screw- 1/4-20 X 1.25 set screw for slotted cable stop Screw- 1/4-20 X 1 black phillips VX18 press column (attaches press bumper) Sortew- 10-32 X 1.25 phillip for press adjust cable tension (uses #58920 jam nut) Seat Back Adjustment assembly- row/ab station Seat Back weldment- row station, painted		· · · · · · · · · · · · · · · · · · ·
Retainer- for cable on leg developer and top of weight stack Retainer- for row arm cable Retainer- for row arm cable Retainer- for row arm cable Roll Pin- 5/16D X 1.25 for leg developer Roll Pin- 5/32D X 7/8L for swivel pulleys, butterfly arm pawls, etc. Row Arm assy- chest supported VX Row Arm- weldment Row Seat Lever S1680 Safety Tread- for calf/row block Screw- 1/4-20 X .50 phillip for leg developer pads & press bushing caps Screw- 1/4-20 X 1.25 OPH for arm pads & bushing cap tensioning Screw- 1/4-20 X 1 black phillips VX18 press column (attaches press bumper) S710 Screw- 10-32 X 1.25 phillip for press adjust cable tension (uses #58920 jam nut) Seat Back Adjustment assembly- row/ab station Seat Back weldment- row station, painted	10580	Pulley- 4.5-inch
20660 Retainer- for cable on leg developer and top of weight stack 46920 Retainer- for row arm cable 48340 Roll Pin- 5/16D X 1.25 for leg developer 27910 Roll Pin- 5/32D X 7/8L for swivel pulleys, butterfly arm pawls, etc. 63450 Row Arm assy- chest supported VX 63440 Row Arm- weldment 42450 Row Seat Lever 51680 Safety Tread- for calf/row block 14500 Screw- 1/4-20 X .50 phillip for leg developer pads & press bushing caps 15890 Screw- 1/4-20 X 1.25 OPH for arm pads & bushing cap tensioning 22280 Screw- 1/4-20 X .25 set screw for slotted cable stop 55740 Screw- 1/4-20 X 1 black phillips VX18 press column (attaches press bumper) 53710 Screw- 10-32 X 1.25 phillip for press adjust cable tension (uses #58920 jam nut) 56050 Seat Back Adjustment assembly- row/ab station 54270 Seat Back weldment- row station, painted	25220	Pulley- 6 inch
46920 Retainer- for row arm cable 48340 Roll Pin- 5/16D X 1.25 for leg developer 27910 Roll Pin- 5/32D X 7/8L for swivel pulleys, butterfly arm pawls, etc. 63450 Row Arm assy- chest supported VX 63440 Row Arm- weldment 42450 Row Seat Lever 51680 Safety Tread- for calf/row block 14500 Screw- 1/4-20 X .50 phillip for leg developer pads & press bushing caps 15890 Screw- 1/4-20 X 1.25 OPH for arm pads & bushing cap tensioning 22280 Screw- 1/4-20 X .25 set screw for slotted cable stop 55740 Screw- 1/4-20 X 1 black phillips VX18 press column (attaches press bumper) 53710 Screw- 10-32 X 1.25 phillip for press adjust cable tension (uses #58920 jam nut) 56050 Seat Back Adjustment assembly- row/ab station 54270 Seat Back weldment- row station, painted	54190	Rack Housing used in row seat back adjustment- has notches-painted
Roll Pin- 5/16D X 1.25 for leg developer Roll Pin- 5/32D X 7/8L for swivel pulleys, butterfly arm pawls, etc. Row Arm assy- chest supported VX Row Arm- weldment Row Seat Lever Safety Tread- for calf/row block Screw- ½-20 X .50 phillip for leg developer pads & press bushing caps Screw- ½-20 X 1.25 OPH for arm pads & bushing cap tensioning Screw- 1/4-20 X 1.25 set screw for slotted cable stop Screw- 1/4-20 X 1.25 phillip for press adjust cable tension (uses #58920 jam nut) Scat Back Adjustment assembly- row/ab station Seat Back weldment- row station, painted		
27910 Roll Pin- 5/32D X 7/8L for swivel pulleys, butterfly arm pawls, etc. 63450 Row Arm assy- chest supported VX 63440 Row Arm- weldment 42450 Row Seat Lever 51680 Safety Tread- for calf/row block 14500 Screw- ½-20 X .50 phillip for leg developer pads & press bushing caps 15890 Screw- ½-20 X 1.25 OPH for arm pads & bushing cap tensioning 22280 Screw- 1/4-20 X .25 set screw for slotted cable stop 55740 Screw- 1/4-20 X 1 black phillips VX18 press column (attaches press bumper) 53710 Screw- 10-32 X 1.25 phillip for press adjust cable tension (uses #58920 jam nut) 56050 Seat Back Adjustment assembly- row/ab station 54270 Seat Back weldment- row station, painted		
Row Arm assy- chest supported VX Row Arm- weldment Row Seat Lever S1680 Safety Tread- for calf/row block Screw- ¼-20 X .50 phillip for leg developer pads & press bushing caps Screw- ¼-20 X 1.25 OPH for arm pads & bushing cap tensioning Screw- 1/4-20 X .25 set screw for slotted cable stop Screw- 1/4-20 X 1 black phillips VX18 press column (attaches press bumper) Screw- 10-32 X 1.25 phillip for press adjust cable tension (uses #58920 jam nut) Seat Back Adjustment assembly- row/ab station Seat Back weldment- row station, painted		
Row Arm- weldment 42450 Row Seat Lever 51680 Safety Tread- for calf/row block 14500 Screw- ½-20 X .50 phillip for leg developer pads & press bushing caps 15890 Screw- ½-20 X 1.25 OPH for arm pads & bushing cap tensioning 22280 Screw- 1/4-20 X .25 set screw for slotted cable stop 55740 Screw- 1/4-20 X 1 black phillips VX18 press column (attaches press bumper) 53710 Screw- 10-32 X 1.25 phillip for press adjust cable tension (uses #58920 jam nut) 56050 Seat Back Adjustment assembly- row/ab station 54270 Seat Back weldment- row station, painted		
A2450 Row Seat Lever 51680 Safety Tread- for calf/row block 14500 Screw- 1/4-20 X .50 phillip for leg developer pads & press bushing caps 15890 Screw- 1/4-20 X 1.25 OPH for arm pads & bushing cap tensioning 22280 Screw- 1/4-20 X .25 set screw for slotted cable stop 55740 Screw- 1/4-20 X 1 black phillips VX18 press column (attaches press bumper) 53710 Screw- 10-32 X 1.25 phillip for press adjust cable tension (uses #58920 jam nut) 56050 Seat Back Adjustment assembly- row/ab station 54270 Seat Back weldment- row station, painted		
Safety Tread- for calf/row block 14500 Screw- ½-20 X .50 phillip for leg developer pads & press bushing caps 15890 Screw- ½-20 X 1.25 OPH for arm pads & bushing cap tensioning 22280 Screw- 1/4-20 X .25 set screw for slotted cable stop 55740 Screw- 1/4-20 X 1 black phillips VX18 press column (attaches press bumper) 53710 Screw- 10-32 X 1.25 phillip for press adjust cable tension (uses #58920 jam nut) 56050 Seat Back Adjustment assembly- row/ab station 54270 Seat Back weldment- row station, painted		
14500 Screw- ¼-20 X .50 phillip for leg developer pads & press bushing caps 15890 Screw- ¼-20 X 1.25 OPH for arm pads & bushing cap tensioning 22280 Screw- 1/4-20 X .25 set screw for slotted cable stop 55740 Screw- 1/4-20 X 1 black phillips VX18 press column (attaches press bumper) 53710 Screw- 10-32 X 1.25 phillip for press adjust cable tension (uses #58920 jam nut) 56050 Seat Back Adjustment assembly- row/ab station 54270 Seat Back weldment- row station, painted		
15890 Screw- ¼-20 X 1.25 OPH for arm pads & bushing cap tensioning 22280 Screw- 1/4-20 X .25 set screw for slotted cable stop 55740 Screw- 1/4-20 X 1 black phillips VX18 press column (attaches press bumper) 53710 Screw- 10-32 X 1.25 phillip for press adjust cable tension (uses #58920 jam nut) 56050 Seat Back Adjustment assembly- row/ab station 54270 Seat Back weldment- row station, painted		·
22280 Screw- 1/4-20 X .25 set screw for slotted cable stop 55740 Screw- 1/4-20 X 1 black phillips VX18 press column (attaches press bumper) 53710 Screw- 10-32 X 1.25 phillip for press adjust cable tension (uses #58920 jam nut) 56050 Seat Back Adjustment assembly- row/ab station 54270 Seat Back weldment- row station, painted		
55740 Screw- 1/4-20 X 1 black phillips VX18 press column (attaches press bumper) 53710 Screw- 10-32 X 1.25 phillip for press adjust cable tension (uses #58920 jam nut) 56050 Seat Back Adjustment assembly- row/ab station 54270 Seat Back weldment- row station, painted		
53710 Screw- 10-32 X 1.25 phillip for press adjust cable tension (uses #58920 jam nut) 56050 Seat Back Adjustment assembly- row/ab station 54270 Seat Back weldment- row station, painted		
56050 Seat Back Adjustment assembly- row/ab station 54270 Seat Back weldment- row station, painted		
54270 Seat Back weldment- row station, painted		
		,
154220	54220	Seat Link- used in row station seat back adjustment, painted
62700 Seat Lock Strut/Latch assembly		
60610 Selector Pin		•
20630 Selector Shaft- standard for 210 and 260 pound weight stacks (20 hole)		
43570 Shaft5 DIA X 8 for row station upper back pivot		
43580 Shaft5 DIA X 8.5 for leg developer/seat pivot (seat pivots on this)		
17750 Shaft Retainer5 shaft (large) for most shafts		
54700 Shim Kit- for bench not centered w/press arm,need color, include drawing		
55350 Shim/Spacer- press station for pick-up slack reduction	55350	Shim/Spacer- press station for pick-up slack reduction

VX-18	
Part #	Part Description
60510	Single Moving Pulley assembly- with pulley & hardware
60500	Single Moving Pulley bracket- no pulley & hardware
16520	Spacer81 X .52 X .5 nylon for guide rods
28200	Spring- butterfly arm pawl
27900	Spring- extension 1.25FL for lat hold down, press handle & seat adjust
22960	Spring- extension 8.4 x 1" dia. for press station weight reduction
17930	Spring Pin25 X 2.75 for lat/leg hold down
23090	Spring Pin313 X 2.25 for 1850 top plate wheel assy.
54010	Spring Pin- 5/32 X 1-1/4 for squat latches
53990	Spring- squat attachment latche (both sides)
	Squat Attachment- left-side Obsolete 01/07
	Squat Attachment- right-side Obsolete 01/07
66400	Contr'd Squat Assy- Left Side
66410	Contr'd Squat Assy- Right Side
55970	Tape- UHMW 1 X .015 X 2 used in seat back adjustment
28040	Tie- 4 inch plastic
60700	Top Plate- weight stack
39820	Top Plate Wheel assembly
39390	Top Plate Wheel weldment- not assembled with wheels and cable retainer
49090	Touch-Up Paint- Black bottle
20800	Touch-Up Paint- Black can
49100	Touch-Up Paint- Classic Pewter bottle
15520	Touch-Up Paint- Classic Pewter can
63360	Touch-Up Paint- Sterling Silver bottle
63350	Touch-Up Paint- Sterling Silver can
49080	Touch-Up Paint- White bottle
20790	Touch-Up Paint- White can
52380	Tread (safety)- left-side squat
52390	Tread (safety)- right-side squat
54100	Trim Strip- for leg developer
43160	Washer688 X .39 X .03 black nylon for C-1 bench
22050	Trim Strip- weight stack guard (6.867 ft.needed)(generic#- not for specific location)
53940	Tube Closure/End Cap- 1 inch round for squat attachments
15780	Tube Closure/End Cap- 1 X 2 X 10-14GA for press housing
42250	Tube Closure/End Cap- 1.75 inch for end of press handle
60470	Tube Closure/End Cap- 1.75 inch round external for butterfly arms
51330	Tube Closure/End Cap- round single piece closure/retainer for foam rollers
11340	Tube Connector- 5/16-18 X 1" threaded insert for guide rods
62610	Upholstery- bench seat back VECTOR bench ONLY (6-hole)
43110	Upholstery- butterfly arm pad BACKING BOARD ONLY- left side
43100	Upholstery- butterfly arm pad BACKING BOARD ONLY- right side
43090	Upholstery- butterfly station arm pad- left side
43080	Upholstery- butterfly station arm pad- right side
55650	Upholstery- full set VX18/38 without bench (as shipped with machine)
63030	Upholstery- full set with VECTOR bench upholstery (6-hole seat back)
59200	Upholstery- seat back butterfly station
51140	Upholstery- seat back leg/ab station
39090 61330	Upholstery- seat bottom bench Upholstery- seat bottom butterfly station
43210	
	Upholstery- seat bottom leg/ab station Upholstery- VECTOR bench full set
63020 55750	Upper Stack Support assembly- with pulley & hardware
54600	Upper Stack Support assembly- with pulley & hardware Upper Stack Support- without pulley or hardware
62760	Vector Bench assembly w/o upholstery (components listed on separate sheet tab)
VB???	Vector Bench- complete/boxed
46970	Washer688 X .39 black nylon for taking up slack in leg/ab seat assembly
TUU/ U	Trasher

VX-18	
Part #	Part Description
12620	Washer- 7/8-16 X 1/2 X 14GA
15910	Washer- finishing for butterfly arm pads
26130	Washer- neoprene bumper for top plate- standard
62850	Washer/Bushing- 1-1/2 X 1 X 14GA for b/fly arms/cams (uset w/#12340 cotter)
60680	Weight Plate- 10 pound
60690	Weight Plate- 15 pound
60710	Weight Plate- box of five 10 pound plates
60720	Weight Plate- box of five 15 pound plates